

CYCLESIREN - User Programming Instructions for Sounds and Lighting Modes

Dear Customer,


The Horn & Siren sound selections are factory defaulted to the following:

- **HORN BUTTON** – Horn sound
- **SIREN BUTTON** – Wail sound
- **COUNTY MODE** – USA Mode

Please follow the instructions below. to reprogram the defaults.

To Program USA, California, or European Modes:
Simultaneously hold down buttons 1 & 3 (push button 3 first then 1). The siren will beep about 6 times and then a multi-tone confirmation will sound. Release buttons. Then press one of the following buttons:
Button 1 - USA Mode, **Wail siren sound** and flashing **red/blue** front lighting.
Button 2 - California Mode, **Yelp siren sound** and **solid-red ON** with blue flashing front lighting..
Button 3 - European Mode, **Hi-Low siren sound** and **all blue** flashing front lighting.
NOTE: The default Country Mode sounds can be re-programmed, see programming of Siren or Horn sounds.

1 = Siren Button
2 = Horn Button
3 = Light Button

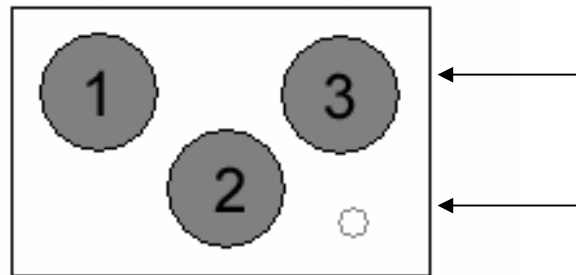

LED INDICATOR
Red = Low battery
Green = Taillight ON, flashes every 7-seconds
Amber = OK to release button – LONG PUSH
Green Strobe = Replaces audible button click

Programming the Siren or Horn Sounds:

WARNING - Place your hand over front of siren to muffle the sound

Simultaneously hold down buttons 2 & 3 (push button 3 first then 2). The siren will beep about 6 times and then a multi-tone confirmation is heard, then release buttons.

After several seconds a series of sounds will play.

To select a horn sound press button-2 immediately after the sound has played.

To select a siren sound press button-1 immediately after the sound has played.

To toggle on/off audible button click-sound press button-3, at any time (see manual regarding this function).

Exit from the Programming Mode will occur after selection of a given sound and you must reenter the programming mode to select a new sound for the other button.

The sounds for Horn or Siren buttons are specific and selecting the wrong sound will not re-program the associated button.

The sound selection for the *Siren Button* are, *Wail*, *Yelp* and *Hi-Low*.

The sound selection for the Horn Button are, *Horn*, *Whistle* and *Phaser*.

NOTE: PROGRAM THE COUNTY MODE FIRST (THIS SETS THE LIGHTING CONFIGURATION) THEN REPROGRAM THE DEFAULT SOUNDS TO YOUR PREFERENCE.